LUDLUM MODEL 6 GEIGER COUNTER

February 2011
Serial No. 170123 and Succeeding
Serial Numbers

LUDLUM MODEL 6 GEIGER COUNTER

February 2011
Serial No. 170123 and Succeeding
Serial Numbers



STATEMENT OF WARRANTY

Ludlum Measurements, Inc. warrants the products covered in this manual to be free of defects due to workmanship, material, and design for a period of twelve months from the date of delivery. The calibration of a product is warranted to be within its specified accuracy limits at the time of shipment. In the event of instrument failure, notify Ludlum Measurements to determine if repair, recalibration, or replacement is required.

This warranty excludes the replacement of photomultiplier tubes, G-M and proportional tubes, and scintillation crystals which are broken due to excessive physical abuse or used for purposes other than intended.

There are no warranties, express or implied, including without limitation any implied warranty of merchantability or fitness, which extend beyond the description of the face there of. If the product does not perform as warranted herein, purchaser's sole remedy shall be repair or replacement, at the option of Ludlum Measurements. In no event will Ludlum Measurements be liable for damages, lost revenue, lost wages, or any other incidental or consequential damages, arising from the purchase, use, or inability to use product.

RETURN OF GOODS TO MANUFACTURER

If equipment needs to be returned to Ludlum Measurements, Inc. for repair or calibration, please send to the address below. All shipments should include documentation containing return shipping address, customer name, telephone number, description of service requested, and all other necessary information. Your cooperation will expedite the return of your equipment.


LUDLUM MEASUREMENTS, INC. ATTN: REPAIR DEPARTMENT 501 OAK STREET SWEETWATER, TX 79556

800-622-0828 325-235-5494 FAX 325-235-4672

TABLE OF CONTENTS

1.	GENERAL	1
	SPECIFICATIONS	
	DESCRIPTION OF CONTROLS AND FUNCTIONS	
	OPERATING PROCEDURES	
	CALIBRATION	
	MAINTENANCE	
PA	RTS LIST	
	Model 6 Geiger Counter	
	Circuit Board, Drawing 363 X 452 Wiring Diagram, Drawing 363 x 466	4 5
DF	RAWINGS AND DIAGRAMS	

REV #	ALTERATIONS	DATE	BY
1	VALID	11/27/89	ВK
2	UPDATED FRONT PANEL	4/22/06	CMC

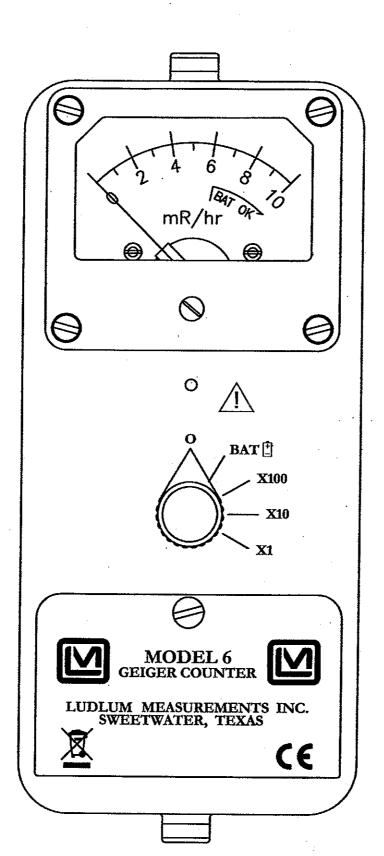

DVN DATE CHK DATE	APP BATE SEW 4-24-06
PART NUM 4363-262	SCALE FULL M
TITLE M 6 GEIGER (
SHI DAK STREET SHEETWITE, TEXAS FROM	363 SHEET 262

1. GENERAL

The Model 6 is a portable battery operated Geiger Counter with an internal GM detector. The instrument features a regulated high-voltage supply, five-position switch for selecting battery check or scale multipliers of X1, X10, X100, and internal calibration controls for the range

multipliers, and high voltage. The meter scale reads 0 to 10 mR/hr, producing a range of 0 to 1 R/hr with the three linear range multipliers. The unit body is made of cast aluminum, including the meter housing. The instrument cover (can) is 0.23 cm (0.090 in.) thick aluminum.

2. SPECIFICATIONS

POWER: two standard "D" size batteries

LINEAR RANGES: 0-1 R/hr; meter presentation of 0-10 mR/hr with range multiples of X1, X10, and X100

DETECTED RADIATION: gamma; X-ray

LINEARITY: ±10% full scale

BATTERY LIFE: exceeds 600 hours with a fresh set of alkaline "D" cell batteries

BATTERY DEPENDANCE: instrument calibration changes less than 3% within battery check limits on meter

OVERLOAD PROTECTION: overload circuitry deflects meter pointer to full scale when the detector is exposed to radiation intensities greater than the upper operating limit (greater than 10 R/hr)

METER: 1 milli-amp, 6.4 cm (2.5 in.) scale with pivot-and-jewel movement

RESPONSE TIME: four seconds measured from 10% to 90% of full scale

DETECTOR: internally-mounted 71412 tube

SIZE: 10.7 x 8.9 x 21.6 cm (4.2 x 3.5 x 8.5 in.) (H x W x L), less handle

WEIGHT: 1.4 kg (3 lb) less detector, batteries, and handle

FINISH: drawn-and-cast aluminum, with beige powder coat

3. DESCRIPTION OF CONTROLS AND FUNCTIONS

Range Multiplier Selector Switch: A five-position switch marked OFF, BAT, X100, X10, and X1. Turning the range selector switch from OFF to BAT position provides the operator a battery check of the instrument. A BAT check scale on the meter provides a visual means of checking the battery status. Moving the range selector switch to one of the range multiplier positions (X1, X10, X100) provides the operator

with an overall range of 0-1R/hr. Multiplying the scale reading by the multiplier determines the actual reading.

Range Calibration Adjustments: Internal potentiometers which allow individual calibration for each range multiplier. Removing the instrument housing will allow access to these controls.

4. OPERATING PROCEDURES

Note: To open the battery lid, twist the lid button counter-clockwise a quarter of a turn. To close, twist clockwise a quarter of a turn.

 Open the battery lid and install two "D" size batteries. Note (+) (-) marks on the inside of the lid. Match the battery polarity to these marks.

Note: Center post of flashlight battery is positive.

• Close the battery box lid.

- Switch the range switch to BAT. The meter should deflect to the battery check portion of the meter scale. If the meter does not respond, recheck that the batteries have proper polarity.
- Turn the range switch to X1. Expose the instrument to a radiation check source. The meter should respond.
- Check calibration and proceed to use the instrument.

5. CALIBRATION

• For detector operating point, remove the instrument housing and adjust R33 (Drawing 363 x 452) for 550 volts.

Note: Measure high voltage with a Model 500 Pulser or a high-impedance voltmeter with a high-meg probe. If one of these instruments is not available, use a voltmeter with a minimum of 1000 megohm input resistance.

- Do not use a vacuum tube type voltmeter for this adjustment unless an external highvoltage multiplier probe is used.
- Switch the instrument range multiplier switch to X100 position. Place the detector on calibration range center line with the detector perpendicular to the radiation source. Expose the detector to a calibrated gamma radiation field, which corresponds to approximately 80% of full meter scale. Adjust the X100 range calibration control for the proper reading. Position the instrument in field. which corresponds approximately 20% of meter scale. Confirm meter indicates within 10% of reading. Repeat the calibration procedure for the X10 and X1 range positions.
- Replace the instrument housing.

6. MAINTENANCE

- Instrument maintenance consists of keeping the instrument clean and periodically checking the batteries and the calibration.
- An instrument operational check should be performed prior to each use by exposing the
- detector to a known source and confirming the proper reading on each scale.
- Recalibration should be accomplished after any maintenance or adjustment of any kind has been performed on the instrument.

Battery replacements are not considered to be maintenance and do not normally require the instrument to be recalibrated.

- Ludlum Measurements recommends recalibration at intervals no greater than one year. Check the appropriate regulatory agencies' regulations to determine required recalibration intervals.
- The batteries should be removed and the battery contacts cleaned of any corrosion at

least every three months. If the instrument has been exposed to a very dusty or corrosive atmosphere, more frequent battery servicing should be used.

 Use a spanner wrench to unscrew the battery contact insulators, exposing the internal contacts and battery springs. Removing the handle will facilitate access to these contacts.



NEVER STORE THE INSTRUMENT OVER 30 DAYS WITHOUT REMOVING BATTERIES. ALTHOUGH THIS INSTRUMENT WILL OPERATE AT VERY HIGH AMBIENT TEMPERATURES, BATTERY SEAL FAILURE CAN OCCUR AT TEMPERATURES AS LOW AS 37.8 °C (100 °F).

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.	
Model 6 Geiger Counter			RESISTORS			
UNIT	Completely Assembled Model 6 Geiger Counter		R1-R2 R3 R4 R5	10k 2.2k 1 MEG 10k	10-7016 10-7012 10-7028 10-7016	
Ci	rcuit Board, Drawing 363	X 452	R6	SAT (2.37k TYP.)	12-7648	
BOARD	Assembled Circuit	5363-610	R7 R8 R9	1k 47k 10k	10-7009 10-7020	
CAPA	CITORS		R10	1 MEG	10-7016 10-7028	
C1-C4	100μF, 10V, DT	04-5576	R11	330k	10-7051	
C5	1μF, 35V, DT	04-5575	R12	10k	10-7016	
C6-C8	10μF, 20V, DT	04-5592	R13	200 OHM	10-7006	
C9	1μF, 35V, DT	04-5575	R14	220k	10-7066	
C10	330pF, 100V	04-5531	R15	18k	10-7018	
C11-C12	0.001μF, 100V, C	04-5519	R16	82k	10-7022	
C13	470pF, 100V	04-5555	R17	33k	10-7019	
C14	0.1μF, 100V, C	04-5521	R18 R19	10k 1k	10-7016 10-7009	
C15	0.01μF, 100V, C	04-5523	R19 R20	100k	10-7009	
C16	0.0027μF, 3kV, C	04-5520	R20 R21	100k 180k	10-7023	
C17-C18	0.0027μF, 3kV, C	04-5518	R21 R22	100k 100k	10-7008	
C17-C10 C19-C20	100pF, 3kV, C	04-5532	R23	100k 10 MEG	10-7023	
C13-C20	0.0047μF, 100V, C	04-5570	R23 R24	4.7k	10-7031	
C21	0.0047μ1, 100 γ, ε	04-5570	R24 R25	1.5 MEG	10-7014	
TRAN	SISTORS		R26	2.2 MEG	10-7058	
11011			R20 R27	2.2 MEG 22k	10-7032	
Q1-Q3	2N3904	05-5755	R27 R28	100 OHM	10-7070	
Q4 Q4	2N4402BU	05-5763	R29-R30	100 OHW 100k	10-7004	
Q5	2N4402	05-5775	R31	1 G	12-7686	
Q.		00 00	R32	634R, 1/3W, 1%	12-7808	
INTEG	GRATED CIRCUITS		R33	100k TRIMMER	09-6823	
21,122	J111122 011100115		R34- R35	1 MEG TRIMMER		
U1	CA3096	06-6023	R36	100k TRIMMER	09-6823	
U2	MAX631	06-6249	TCO		07 0025	
U3	ICM7555	06-6136	INDU	CTOR		
U4	TLC27M7IP	06-6248	11,200	21011		
U5	TLC372	06-6265	L1	470UHY	21-9600	
U6	LM385Z-1.2	05-5808				
			TRAN	SFORMERS		
DIODI	ES				40,0003	
CR1	1N4148	07-6272	T1	L8050	40-0902	
CR1-CR3	1N4148 1N4007	07-6272	TATACO E	CTODE		
CK2-CK3 1N400/ 07-62/4			DETE	CTORS		
THERMISTORS			V1	GM TUBE-LND 71412	01-5306	
R37-R38	RL1006-98	07-6332				

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
MISCEI	LLANEOUS		MISCE	LLANEOUS	
P2	CONN-640456-9		M1	PORT BEZEL	
	MTA100	13-8094		W/MOVEMENT	4363-188
			*	PORT BEZEL	
7 EA.	CLOVERLEAF			W/GLASS	4363-352
	011-6809-000-599	18-8771	*	PORT METERFACE	7363-136
			*	METER MOVEMEN	T 15-8030
Wiri	ing Diagram, Drawing	363 x 466	*	PORTABLE KNOB	08-6613
-	8 7 8		*	MAIN HARNESS	
CONNE	CTARC			Model 6	8363-622
CONNE	CIORS		*	BATTERY CONTACT SET	
T-1	CONINI (40.442.0		*	CASTING SCREENED	
J1	CONN-640442-9	12.01/0		Model 6	9363-324
	MTA100	13-8169	*	CAN ASSY.	
CAMADOI	TEG			Model 6	4363-321
SWITCE	HES		*	BATT LID W/LATCHSET	
C1	D2C0402N	00 (501		Model 6	9363-325
S1	D3G0402N	08-6501	*	PORT HANDLE (RO	LLED)
BATTERY			W/SCREWS	7363-139	
B1-B2	DURACELL "D"	21-9313			

DRAWINGS AND DIAGRAMS

Model 6 Front Panel, Drawing No. 363 x 262 (before page 1) Main Circuit Board, Drawing No. 363 x 452 Main Circuit Board Layouts, Drawing No. 363 x 464 Wiring Diagram, Drawing No. 363 x 466

